

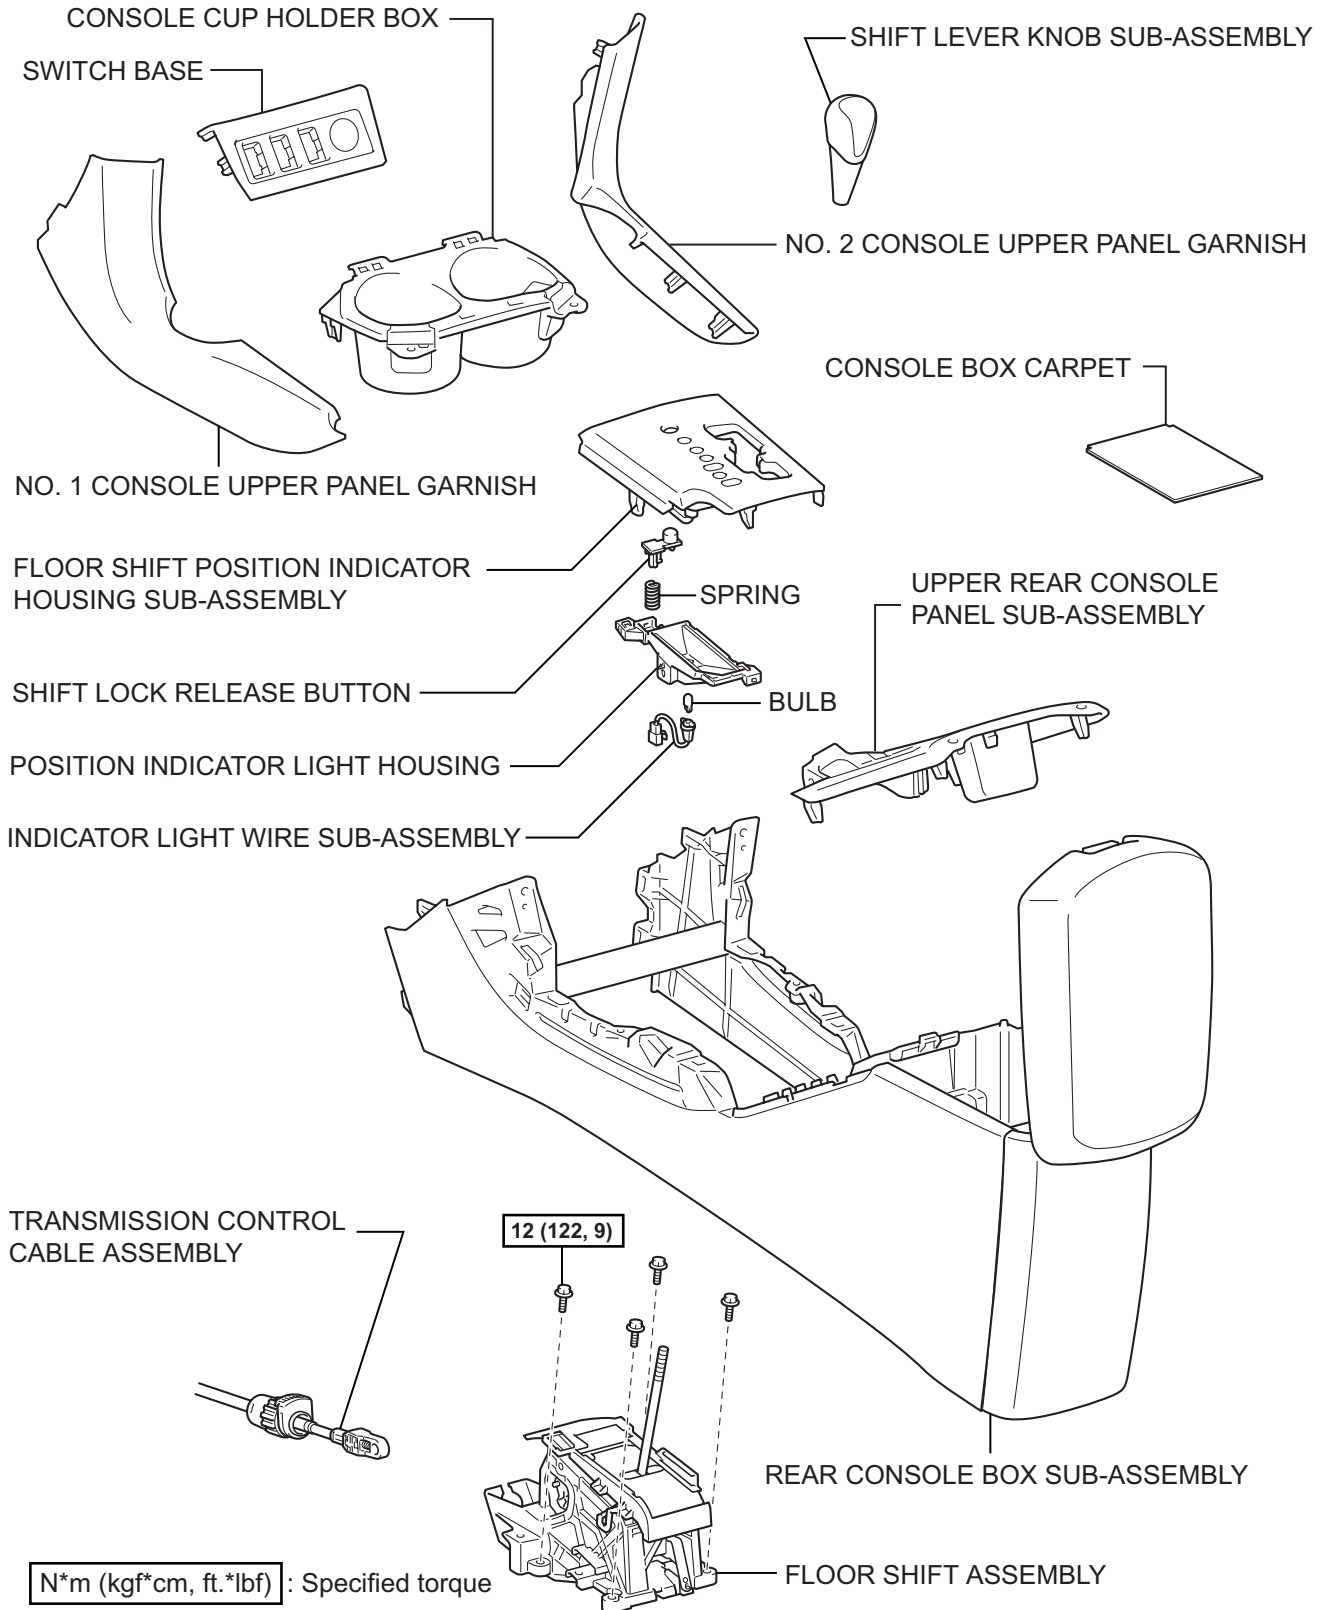


FLOOR SHIFT ASSEMBLY

COMPONENTS

AX

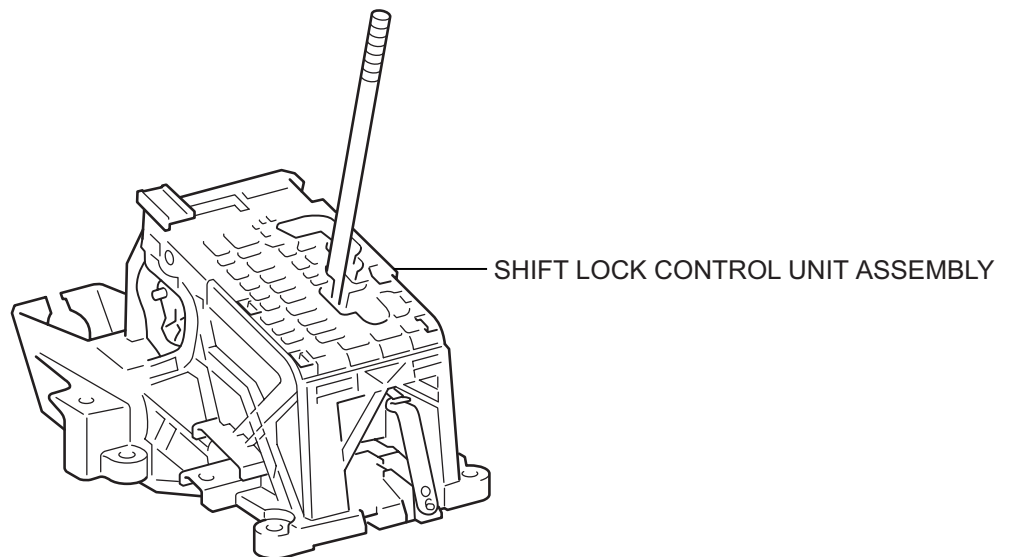

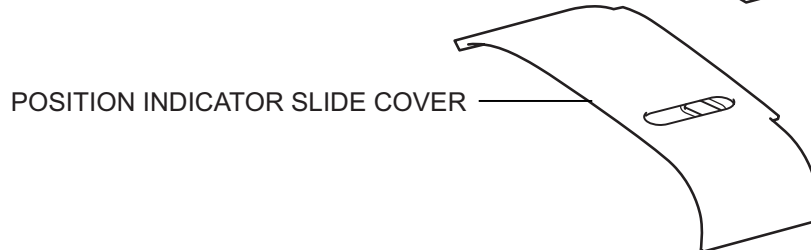

AX

REMOVAL



1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY**
3. **REMOVE REAR CONSOLE BOX SUB-ASSEMBLY**
(a) Remove the console box (see page [IP-20](#)).
4. **DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY**

- (a) Disconnect the control cable from the shift lever.

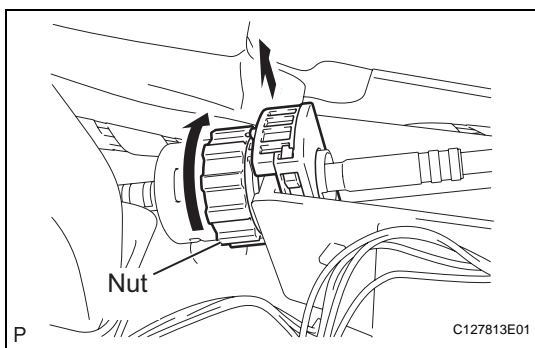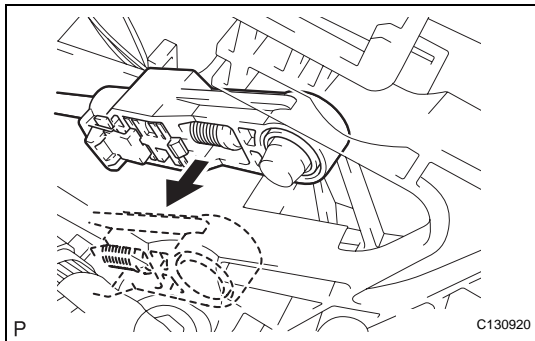


- (b) Turn the nut and disconnect the control cable from the shift lever retainer.

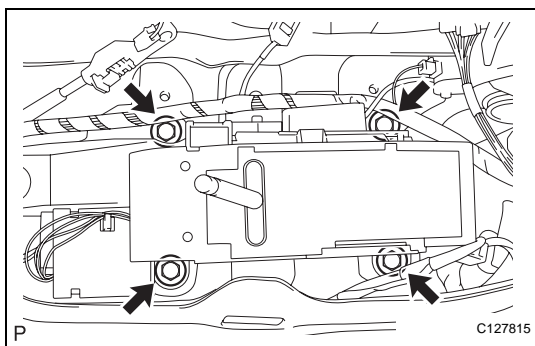

5. **REMOVE FLOOR SHIFT ASSEMBLY**
(a) Remove the 4 bolts and floor shift.


- (b) Disconnect the 2 connectors and detach the clamp.

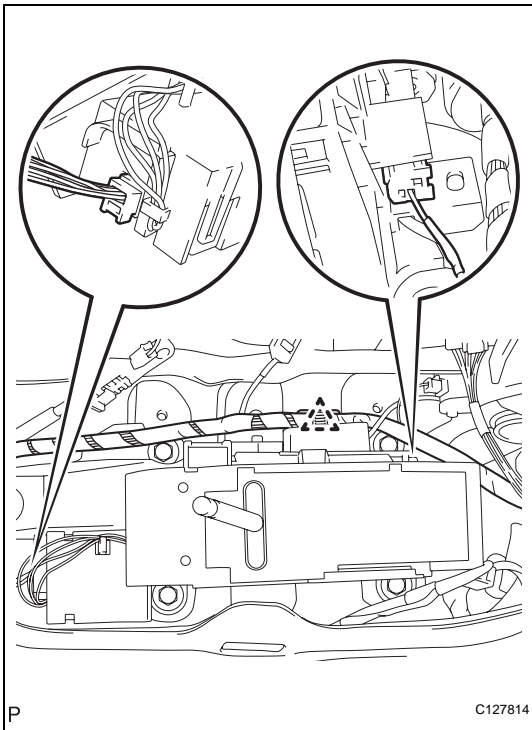

DISASSEMBLY

1. REMOVE LOWER POSITION INDICATOR HOUSING


- (a) Detach the 4 claws and remove the housing.
- (b) Remove the position indicator slide cover with slide No. 2 cover.

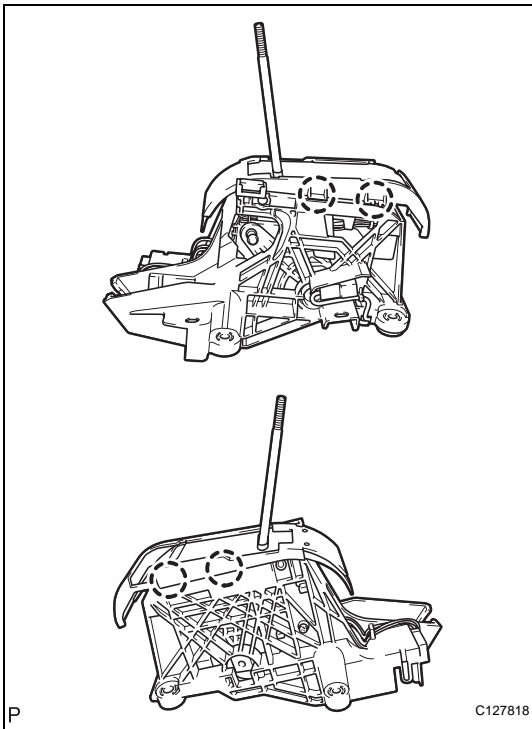


2. REMOVE POSITION INDICATOR LIGHT HOUSING

- (a) Detach the 2 claws and remove the indicator light housing from the floor shift position indicator housing.

3. REMOVE INDICATOR LIGHT WIRE SUB-ASSEMBLY

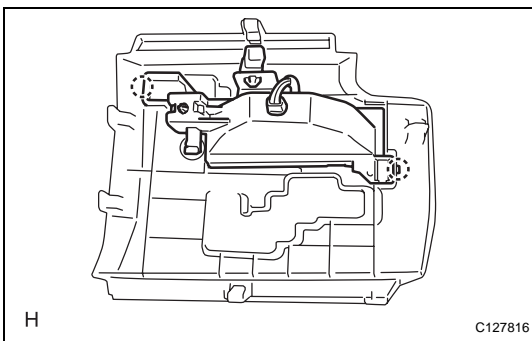

AX

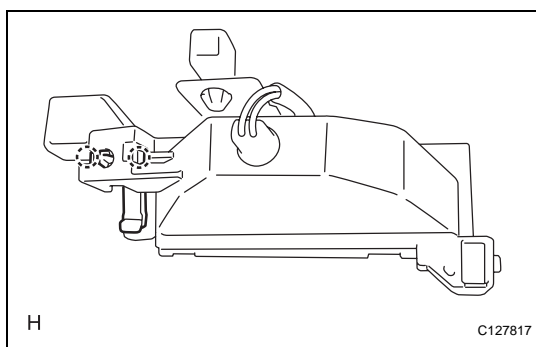**4. REMOVE SHIFT LOCK RELEASE BUTTON**

- (a) Detach the 2 claws and remove the button and spring from the position indicator light housing.

ADJUSTMENT




1. INSPECT SHIFT LEVER POSITION

- When shifting the lever from P to the R position with the ignition switch ON and the brake pedal depressed, make sure that the shift lever moves smoothly and moves correctly into position.
- Start the engine and make sure that the vehicle moves forward when shifting the lever from N to the D position and moves rearward when shifting the lever to the R position.

If the operation cannot be performed as specified, inspect the park/neutral position switch assembly and check the shift lever assembly installation condition.

2. ADJUST SHIFT LEVER POSITION

- Shift the shift lever to the N position.
- Slide the adjuster case cover in the direction shown in the illustration and pull out the lock piece.
- Gently pull the cable rod toward the rear of the vehicle by hand to pull the cable taut.

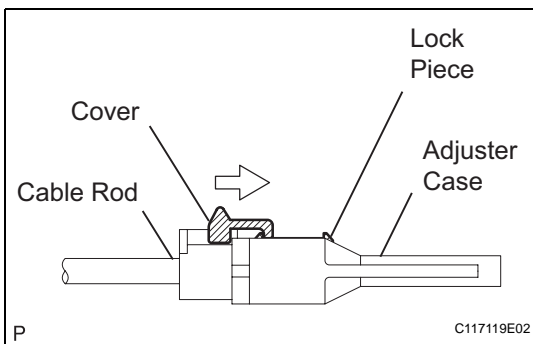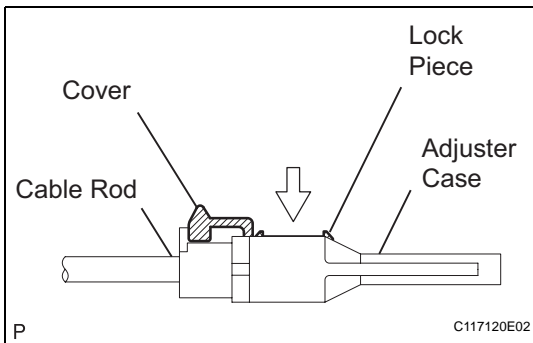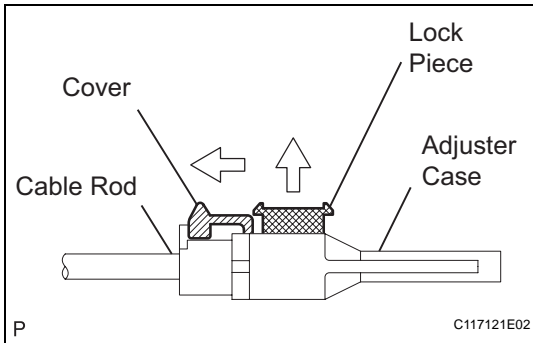

- Press the lock piece into the adjuster case and lock it.


- Slide the cover in the direction shown in the illustration.

NOTICE:

Slide the cover past the protrusion of the lock piece.

- Inspect the operation.

AX

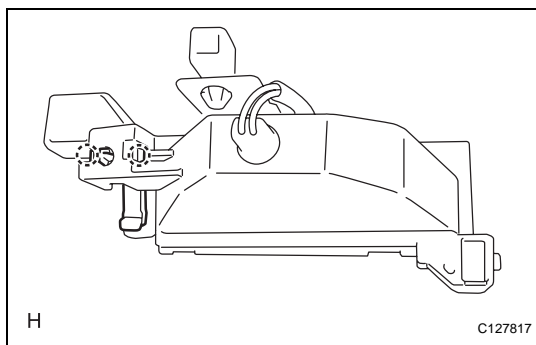


REASSEMBLY

1. INSTALL SHIFT LOCK RELEASE BUTTON


- (a) Install the spring and button and attach the claws to the position indicator light housing.

2. INSTALL INDICATOR LIGHT WIRE SUB-ASSEMBLY

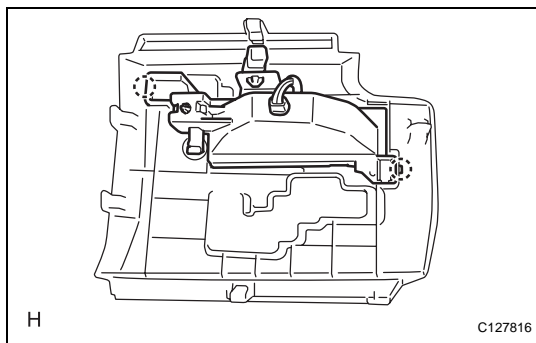

3. INSTALL POSITION INDICATOR LIGHT HOUSING

- (a) Install the indicator light housing and attach the 2 claws to the shift position indicator housing.

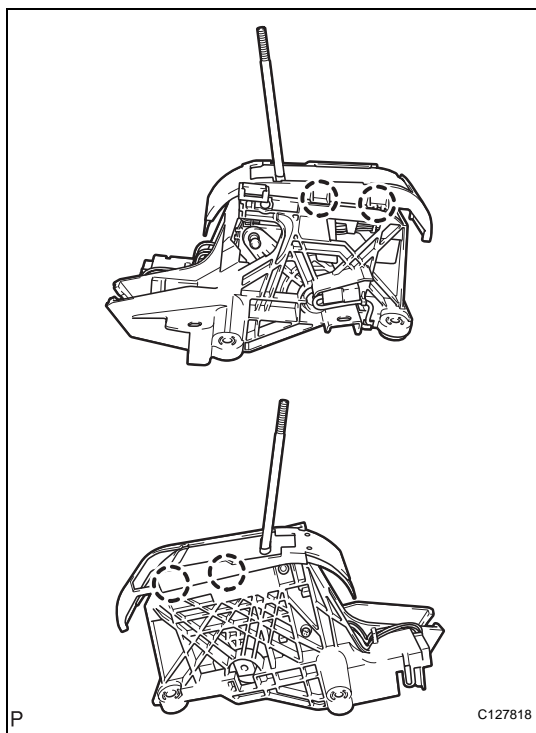

4. INSTALL LOWER POSITION INDICATOR HOUSING


- (a) Install the position indicator slide cover with slide No. 2 cover to the indicator housing.
- (b) Install the housing and attach the 4 claws to the floor shift assembly.

INSTALLATION

1. INSTALL FLOOR SHIFT ASSEMBLY


- Connect the 2 connectors and attach the clamp.
- Install the floor shift with the 4 bolts.

Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

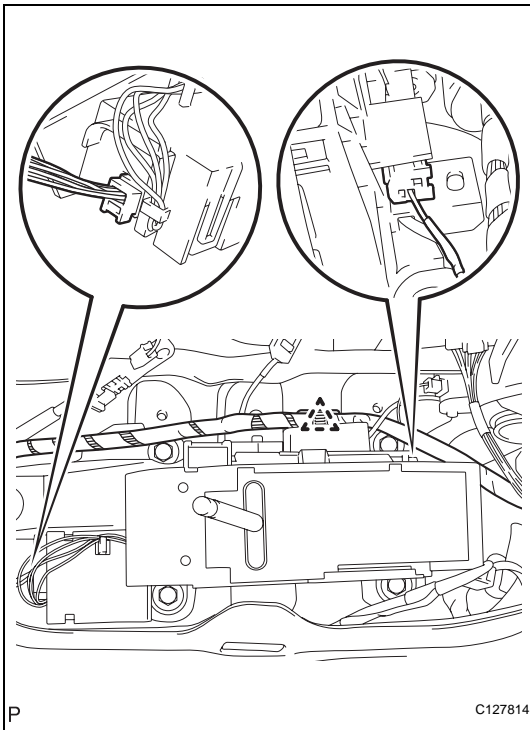

2. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY


- Turn the nut of the control cable and push in the lock.

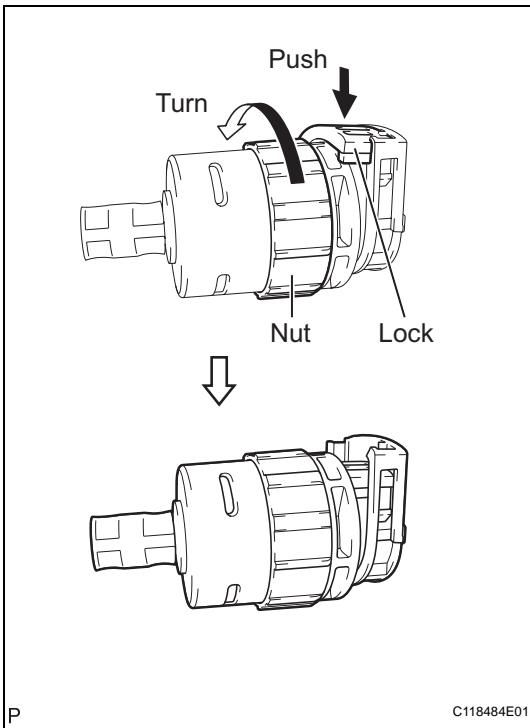


- Install the control cable onto the shift lever retainer.

NOTICE:


- Install the cable with the protruding portion of the cable outer facing upward.

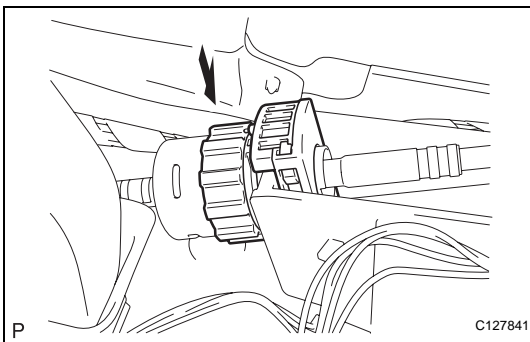

AX

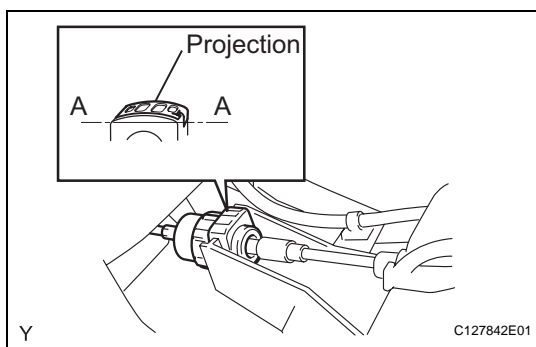

- After installing, check that the lock of the cable outer is protruding beyond portion A-A, as shown in the illustration.

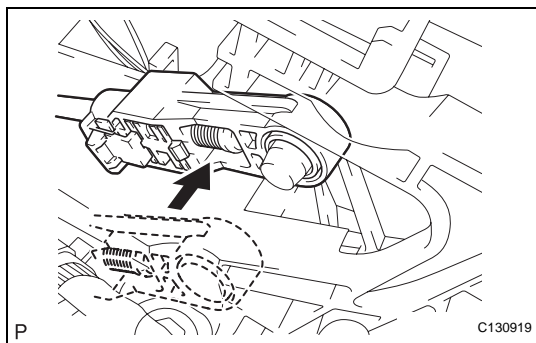

- (c) Connect the control cable to the shift lever.

NOTICE:

Connect the control cable so that the adjusting mechanism lock of the control cable is installed on the driver side of the vehicle.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
4. INSPECT SHIFT LEVER POSITION (See page [AX-164](#))
5. ADJUST SHIFT LEVER POSITION (See page [AX-164](#))
6. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY
 - (a) Install the rear console box (see page [IP-26](#)).
7. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY